

90 PSI Check Valve

Some attachments (most compactors and some hammers/breakers) do not generate adequate back pressure when the switch is in the "off" position. Consequently, the attachment may continue to operate slowly. To correct this, install part # C19650, a 90 psi check valve as shown below.

Note:

The check valve should be between the quick disconnect and the attachment. If it is installed on the other side of QD it will hold pressure against the QD making it very difficult to disconnect.

